



SPARE PARTS.

BP 9 CC / BP 40 CC / BP 380 CC

1. Slide
2. Barrel
3. Recoil spring
4. Firing pin
5. Internal firing pin spring
6. Firing pin spring guide rod
7. Firing pin spring retainer
8. Firing pin retainer
9. Automatic firing pin safety
10. Automatic firing pin safety spring
11. External firing pin spring
12. Firing pin retainer rod
13. Firing pin retainer spring
14. Extractor
15. Extractor spring
16. Extractor pin
17. Rear sight
18. Front sight
19. Internal locking system body
20. Grip catch

21. Slide guide
22. External trigger body
23. Internal trigger body
24. Sear and trigger pin
25. Trigger safety pin
26. Trigger safety spring
27. Sear pusher
29. Sear
30. Sear spring
31. Sear retainer
32. Sear retainer spring
33. Sear retainer pin
34. Slide catch and disassembly bar
35. Slide catch spring
36. Magazine catch button
37. Magazine catch body
38. Magazine catch spring
39. Magazine catch pin
40. Assembly pin

41. Assembly pin retainer
42. Magazine body
43. Magazine base
44. Magazine base retainer
45. Magazine follower
46. Magazine spring
47. Internal locking system retainer
48. Internal locking system spring
49. Loaded chamber indicator body*
50. Loaded chamber indicator spring*
51. Loaded chamber indicator pin*

(* only for BP 9 CC and BP 40 CC models.)